DreamWave®
Forever Your Dreams

User Guide

Model: Harmony
Trade Mark: DREAMWAVE

Thank you for purchasing Harmony BLUETOOTH SPEAKER!

Harmony built in Bluetooth V4.0 with 3 Bauds output.Five compact size easy to carry out and enjoy the music from smart phone everywhere .Hope you will like it!!

www.goodmeetwave.com

Product Introduction

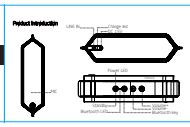

Technical Information

Power: 2.5w

V4.0, A2DP AVRCP

Rechargeable li-ion battery
450mAH, up to 3.5 hours
Charge time: 2.5 hours
Full volume & level of
mix volume full bass status.

2 active driver,2passive driver,
Hi-Fi sound,
Anti-Distortion circuitry

HFC (Function)hands free call

Size: 5.5x4.4 5x2.91 5mm

NET weight: 0.76 kg

Power on/off

Press the button " ⏻ " to turn the speaker on or off.

Pairing and connecting bluetooth devices

1.Press the " ⏻ " key to turn on the power, the blue LED will flash.
Then speaker step into pairing mode waiting for pair automatically.

2. Turn your Bluetooth device connection on,then searching the "Harmony" on your device list.

3. After find the "Harmony" ,please connect with the speaker.After connection complete, Then you are ready to enjoy the music from Harmony.

4.The speaker indicates pairing is complete when the Bluetooth indicator changes from flash to slow flash and the speaker emits a tone.

5.Due to safety issue,the initial volume will be min every time power on. Please adjust the volume from button.

6. Once the connection complete,the speaker will connect to latest device automatically.

7. Harmony include microphone.Once you have incoming call, the music will pause automatically. Then press " ⏻ " to pick up the phone call. when phone call complete,the music will play again.

8. When music play,you also can press " ⏻ " to pause/play the music.

Note:Most standard Bluetooth device can connect with Harmony automatically.
But few some mobile phones should be connected by manually.

Using the LINE IN the connector

To listen audio tracks with 3.5 mm plug jack and is required connect the audio output of PC or MP4/CD –player,jack device to the LINE-IN input on the speaker.

Adjust the volume on the connected device to max maximum,then use the Harmony speaker volume buttons to adjust the volume level.

Special Features

1. Bluetooth wireless signal transmission protocol
2. Low in input,compatible with PC,MP4/CD,mobile devices and other audio sources, it support phone hands free.

Battery Charging

Charge time is approximately three hours to fully charge the battery. The indicator of the battery status lights when the battery charging. Charging status lights went out when the battery full charge. Connect it to DC 5.5V IN to recharge the speaker when the speaker not turn on.

Protection mode

If the speaker is unplugged and unused for more than 24 days, or if the speaker is stored with sickening red status indicator, it enters battery protection mode to preserve battery power. To recharge the speaker,connect it to DC 5.5V IN.

Note:

"If the device is not connected to the Bluetooth speaker ,please shut down and several seconds after the restart , and connect with the Bluetooth speaker .

How It Works



What's in the box

- Harmony X 1
- AC adaptor X 1
- AUX cable X 1
- User guide X 1

Trouble shooting

- Applicable To: All DreamWave Bluetooth speakers
- The trouble shooting steps in this article apply if audio is intermittent, cracking or distorted when streaming via Bluetooth.

1. Try playing other audio files. Ensure that audio can play file from the same audio device when using headphone.

2. If Step 1 is not the case, try listening to audio by connecting the speaker to the Bluetooth device using the Aux-in cable. This will isolate if it's a Bluetooth connection issue or not. Remember to disconnect/unpair the Bluetooth connection first.

3. If the issue only happens when connecting via Bluetooth, do the following:

a.Make sure which you are connecting is this speaker (select "Harmony" within the Bluetooth list on your device)
b.Make sure the volume is not in the minimum
c.Adjust the distance between the speaker and the Bluetooth device.
d.Reset the speaker to its factory default settings.
e.Clear the current pairing entry from your Bluetooth device.
f.Try isolate ,close other devices Bluetooth
g.Try re-pairing the speaker and the Bluetooth device

4.If the issue happens when connecting either via Bluetooth or Aux-in, please contact DreamWave Customer Support via email.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacture could void your authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be located or operating in conjunction with any other antenna or transmitter.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

CAUTION
This symbol indicates that there are important operation & maintenance instructions in the literature accompanying this unit.

RISK OF ELECTRIC SHOCK,DO NOT OPEN
This symbol indicates that there are important operation & maintenance instructions in the literature accompanying this unit.

WARNING: To reduce the risk of fire or electrical shock,do not expose this product to rain or moisture.The product must not be exposed to dripping and spattering and no object filled with liquids such as a vase of flowers should be placed on the product.

CAUTION: Changes or modifications not expressly approved by the manufacturer could void the user is authority to operate this device.

CAUTION: To prevent electric shock ,match wide blade of plug to wide slot,full insert.

FCC ID:2AGEBLLBH08 CE RoHS